



# SPOT D15 RCA TRIM INSTALLATION


1/

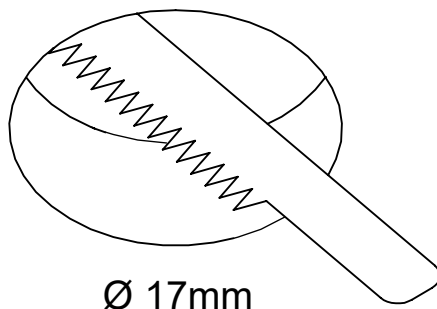

2/

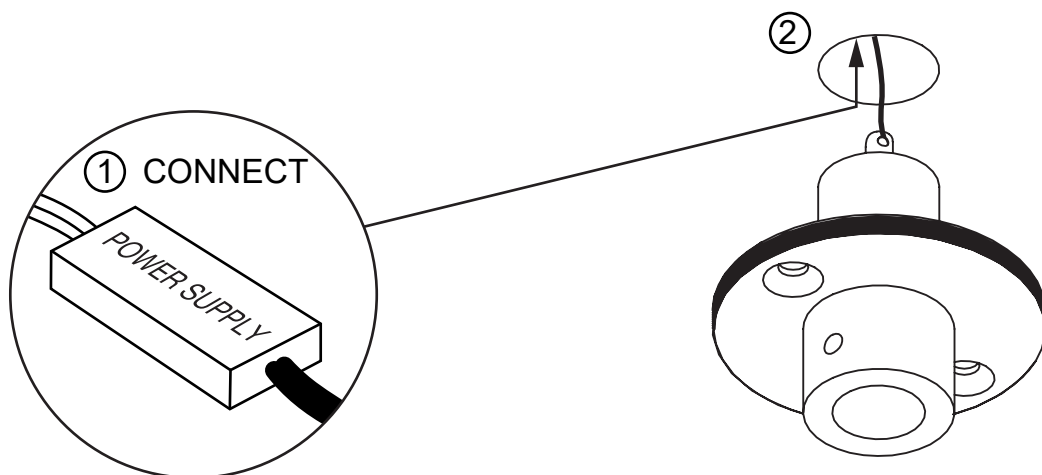


3/

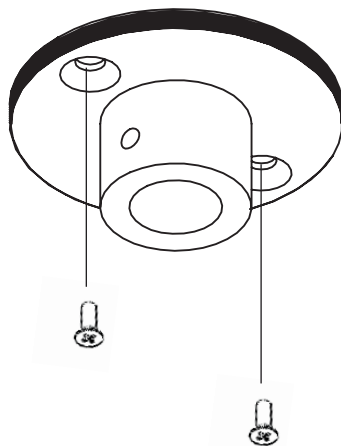

2x vis placo



# SPOT D15 RCA TRIM INSTALLATION

4/

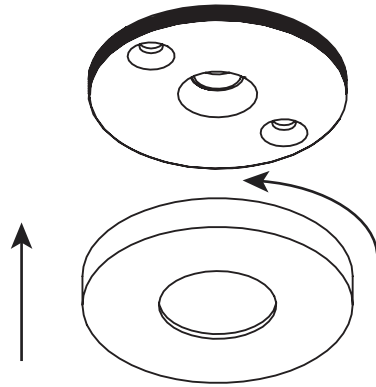


5/

TURN TO THE BLOCK POINT

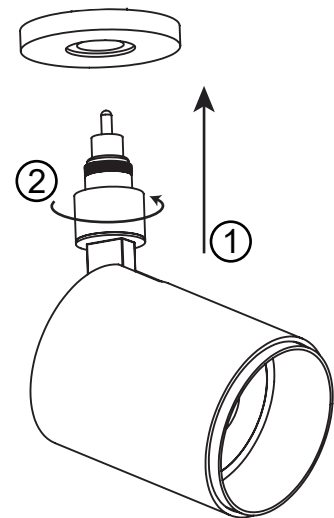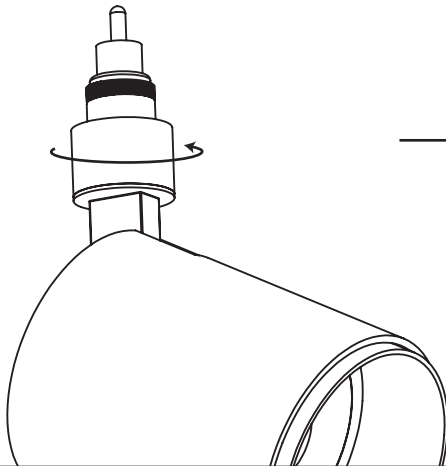

6/

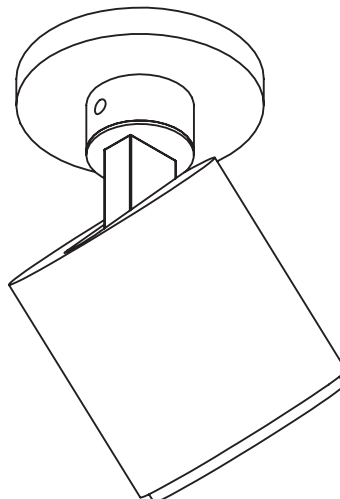

# SPOT D15 RCA TRIM SCHEMA DE CABLAGE

## CABLAGE PARALLELE *parallel wiring*

